



STEALTHBOX

SB-VW-JET4/10W3

Fits 1999-00

Installation of this Stealthbox requires professional installation skills and tools. Please read this installation guide thoroughly before beginning the project. It will guide you step by step through the installation. It is absolutely vital that the enclosure be properly mounted to the vehicle according to these instructions. Failure to mount the enclosure properly presents two problems: 1) The sub-bass performance will suffer due to the movement of the enclosure and 2) A loose enclosure presents a serious safety hazard in the event of a collision or sudden deceleration.

STEP 1: Remove the carpet from the floor of the trunk.

STEP 2: Remove the contents of the spare tire well.

STEP 3: Place the supplied wax square in the location shown in Picture #1.

STEP 4: Fully insert the supplied bolt into the insert on the bottom of the Stealthbox.

STEP 5: Place the Stealthbox in the trunk in its proper location as shown in Picture #2 and push down firmly to force the bolt head to make an imprint in the wax square.

STEP 6: Remove the Stealthbox and locate the impression in the wax square.

CAUTION: Check under the vehicle for any loose brake lines, fuel lines or other hazards before drilling.
Always wear eye protection when drilling.

STEP 7: Drill a 3/8" hole in the location of the imprint in the wax square.



Picture #1



Picture #2



Picture #3

STEP 8: Place the Stealthbox into the spare tire well and bolt it into place as shown in Diagram #1.

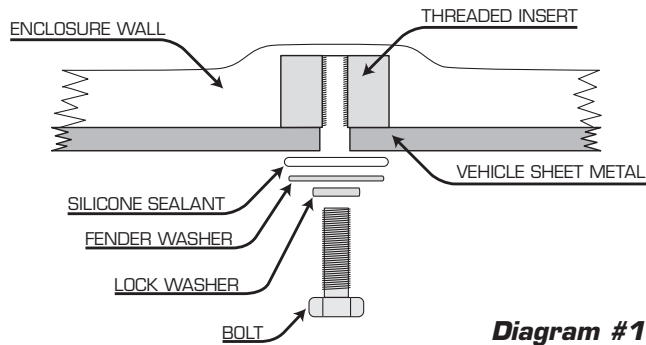


Diagram #1

STEP 9: Place the spare tire on the Stealthbox so that the threaded stud goes through one of the lug bolt holes in the wheel and secure it with the provided 1/2" wing nut and 1/2" fender washer.

STEP 10: Place supplied foam blocks and spacer panels in the locations shown in Diagram #2 and Picture #5. These pieces will lift the floor allowing it to clear the top of the Stealthbox.


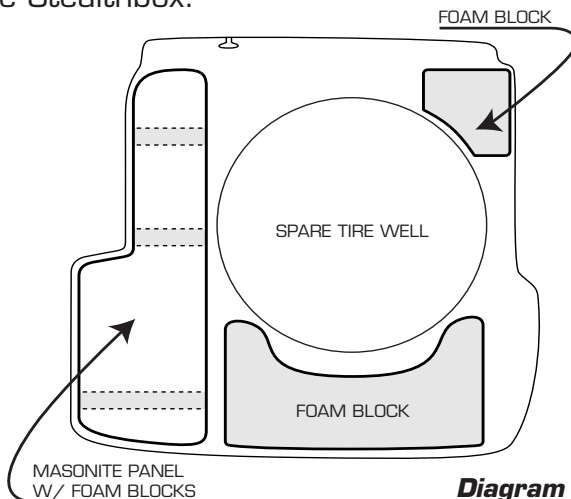


Diagram #2



Picture #4

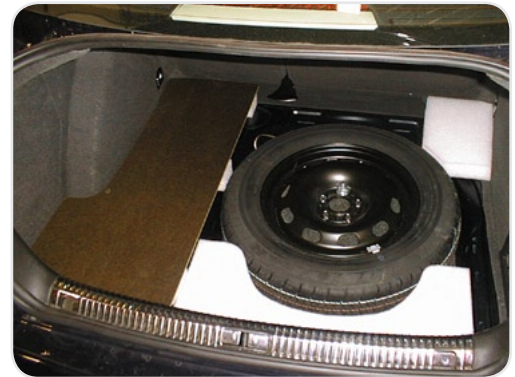

Picture #5



Picture #6

STEP 11: Reinstall the factory carpeted floor panel.

This completes the installation.


Specifications:

Enclosure Type: Acoustic Suspension (Sealed)

Driver Type: 10W3-D2

Cont. Power Handling: 250 Watts

Nominal Impedance: Dual 2Ω
(Wired 4Ω Mono)

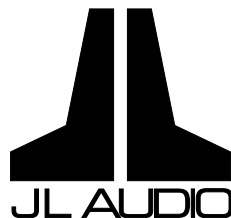

Supplied Materials:

- 1 - 3/8" x 1 1/2" Bolt
- 1 - 3/8" Fender Washer
- 1 - 3/8" Lock Washer
- 1 - 1/2" Fender Washer (On Box)
- 1 - 1/2" Wing Nut (On Box)
- 1 - Sheet Wax Square
- 3 - Floor Stand-Offs (Foam)

10369 N. Commerce Parkway Miramar, FL 33025

www.jlaudio.com

Stealthbox 2000

Stealthbox SB-VW-JET4/10W3

Sheet SKU#011145 Revision 8/23/00